

T7 4K ULTRAHD

HDMI ON CAMERA Monitor
User Manual

DSPROSEE TECHNOLOGY LTD.

Product Information

Model: T7 4K ULTRAHD HDMI ON CAMERA Monitor

Version: V010000

Release Date: July 12th, 2019

Company OSEE TECHNOLOGY LTD.

Contact Information

OSEE TECHNOLOGY LTD.

Address: No.22 Building, No.68 zone, Beiqing Road, Haidian

District, Beijing, China

Post Code: 100094

Tel: (+86) 010-62434168 **Fax:** (+86) 010-62434169

Web: http://www.osee-dig.com/
E-mail: sales@osee-dig.com

About this manual Important

The following symbols are used in this manual:



 The further information or know-how for described subjects above which helps user to understand them better.



 The safety matters or operations that user must pay attention to when using this product.

Contents

The user manual applies to the following device types:

T7 4K ULTRAHD

The images and descriptions of T7 4K ULTRAHD are adopted as examples in the following document.

Before reading the manual, please confirm the device type.



Contents

Chapter 1 Overview	1
Chapter 2 Safety	3
Chapter 3 Unpack and Installation	7
Chapter 4 Features	11
4.1 Parts and Functions	11
4.2 Buttons and Functions	12
4.3 Operations	13
4.4 Power On	15
4.5 ZOOM	16
4.6 Supported Signal Format	19
Chapter 5 Monitor Settings	21
5.1 Menu Operations	22
5.2 Monitor Menu	23
5.2.1 INPUT	
5.2.2 Controls	_
5.2.3 User	
Chapter 6 Scenes and Tools	
6.1 Scenes Tools Settings	

<u>osee</u>

6.1.1 Frame Tools	41
6.1.2 Expose Tools	44
6.1.3 Focus Tools	
6.1.4 Look Tools	55
6.1.5 Scale Tools	58
6.2 Tools Operations	60
6.2.1 Add a Scene	60
6.2.2 Delete a Scene	62
6.2.3 Add a Tool	62
6.2.4 Load/Close Tool Bar	65
6.2.5 Open/Close a Tool	66
6.2.6 Tool Settings	67
6.2.7 Delete a Tool	69
Chapter 7 Specifications	73
7.1 Product detailed information	73
7.2 Dimensions	75



Chapter 1 Overview

T7 4K ULTRAHD is a high-performance UHD HDMI On Camera Monitor to monitor professional 4K HDMI for outdoor photography.

The unit is designed in a high impact plastic frame, and the professional screen glass at full resolution of 1920x1200 with high brightness makes T7 4K ULTRAHD capable of reproducing a natural color and great daylight viewing. In addition, the monitor has excellent assistants functionalities, versatile build-in 3D-LUTs and easy to use.

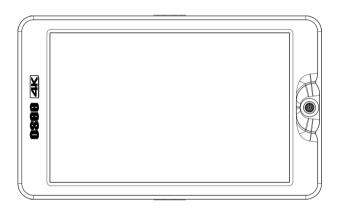


Figure 1-1 A Diagram of T7 4K ULTRAHD

Features

- Support 4K HDMI input
- Support output to external cameras, such as SONY, Panasonic, Canon etc.
- Support high qualified waveform, vector scope, histogram and audio meter
- Support multiple assistants: zebra, focus assist, exposure assist,



peaking adjust

- Provide a five directions joystick as a navigation tool to scroll between scenes pages and set features
- Support SONY NP-F series batteries

Functionality

- Provide versatile build-in 3D-LUT tables, supporting the general LUT files for ARRI, RED, SONY, Panasonic, Canon, BlackMagic and Panavision, etc. And you can upload custom 3D LUTs through SD card and apply to the On Camera monitor
- Support Anamorphic Desqueeze functionality in multiple modes: 1X, 1.33X, 1.5X, 1.66X, 2X, 2XMAG
- Support Image ZOOM functionality to double(2X) or quadruple(4X) the image, and to pan the image in every direction



Chapter 2 Safety

FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Warnings:

Read, keep and follow all of these instructions for your safety. Heed all



warnings.

Warning

Device

- Install in accordance with the manufacturer's instructions.
- Do not touch the screen with sharp, metallic or abrasive objects.
- Do not make the freeze picture displaying on the screen time too long, otherwise, it will leave the afterimage on the screen.
- If the brightness is adjusted to the minimum, then it might be hard to see the display screen.
- · Clean only with dry cloth.
- Do not block any ventilation openings. Leave enough space around the unit for ventilation.
- Do not expose to strong electrical or magnetic fields.
- To reduce the risk of fire or electric shock, do not expose the unit to rain or moisture.
- If the product needs replacement parts, make sure that the service person use replacement parts specified by the manufacture, or those with the same characteristics and performance as the original parts. Use of unauthorized parts can result in fire, electric shock and/or other damage.
- The panel used in this produce is made of glass. Therefore, it can break when it is dropped or applied with impact. Be careful not to be injured by broken glass pieces.
- Refer all servicing to qualified service personnel.
- Specifications are subject to change without notice.

AWarning

 Do not use attachments or accessories not recommended by the manufacture. Use of inadequate attachments may result in



serious accidents.

- Do not damage the power cord, place the heavy objects on the power cord, stretch the power cord, or bend the power cord.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the unit.
- Please remember that almost all HDMI cables do not use locking connectors and will simply pull out if they are jerked or tripped over. Please ensure your cables make a secure connection and avoid flexing them excessively to maintain reliability.





Chapter 3 Unpack and Installation

Unpack:

When unpacking the T7 4K ULTRAHD monitor, please verify that none of the components listed in Table 3.1 are damaged or missing. If there are any components missing, please contact your distributors or OSEE for it.

Quantity No. Item 1 T7 4K ULTRAHD 1 2 AC power adapter 1 3 Ball Head 1 1 4 D-tap to DC IN Cable Warranty Card 1 5 6 Certificate card 1

Table 3-1 Packing List

Installation:

1. Prepare for installation

Please follow the procedures below before installing T7 4K ULTRAHD:

- Check the package and equipment for any visible damage that may have occurred during transit.
- Confirm all the items listed on the packing list have been received.
- Remove all the packing material including electrostatic-resistant



packing.

- · Retain these packing materials for future use.
- 2. Connect required cables for signal input and output.
- 3. Connect the 11~17VDC power source through DC IN interface or powered by battery.
- 4. As a final step, turn on the device by toggling the power switch located on the rear of the unit.

Install Battery:

Only support SONY NP-F series currently. Please take note of the battery installation direction according to the "NP-F" icon near the slot when mounting the battery. The icons are as shown in the following illustration, slide the battery down into the slot until heard a click.

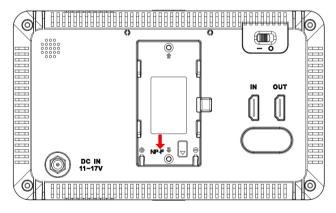


Figure 3-1 Battery Installation

Install Sunhood:

In case of diffusion light and direct illumination, we can use sunhood for the monitor when supervising images.

First, spread the sunhood along the fold lines, then pull the rubber belts



into the depressed slots at both sides of the rear panel of the monitor, adapting to the monitor tightly as below:

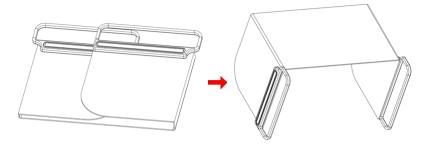


Figure 3-2 Spread Sunhood

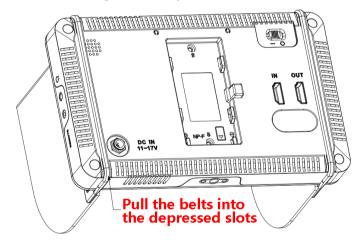


Figure 3-3 Fasten the Belts

Hanger Installation:

There are two 1/4 inch screw holes on the monitor for installing various types of hangers, as shown in the illustration below. Screw the hanger into the screw hole, and fasten it tightly.



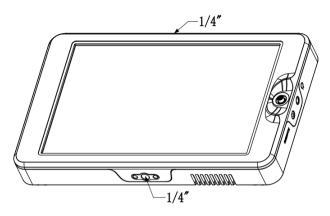


Figure 3-4 Positions for Hanger Installation



Connect a standard signal line to the relevant input port.



Chapter 4 Features

4.1 Parts and Functions

The parts of T7 4K ULTRAHD is shown as below, there are various input and output interfaces for T7 4K ULTRAHD monitor, as shown in Figure 4.1-1.

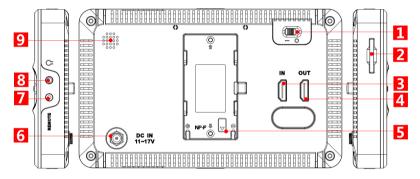


Figure 4.1-1 Parts in Rear Panel

No.	Connector	Description
1	Power Switch	Switch to " " position to power on; and switch to "O" position to power off
2		SD card slot, the SD card is used to load the customized LUT tables, and update firmware.
3	HDMI IN	HDMI input interface, supports HDCP, compatible DVI1.0, HDMI Type-A
4	HDMI OUT	HDMI output interface, supports HDCP, compatible DVI1.0, HDMI Type-A, supports loop out



No.	Connector	Description	
5	Battery Input	External battery NP-F, 6V ~ 8.4V	
6	DC IN	DC power input, 11~17VDC	
7	Remote	Remote control, headphone output, 2.5mm Jack	
8	Ω	Headphone output jack, 3.5mm stereo Jack	
9	Speaker	Internal speaker	

^{*} Support SONY NP-F battery currently.

4.2 Buttons and Functions

The monitor provides a Joystick at the front panel, as shown in Figure 4.2-1. It is used for monitor settings, adding tools for scenes, tools settings, zoom image and so on.

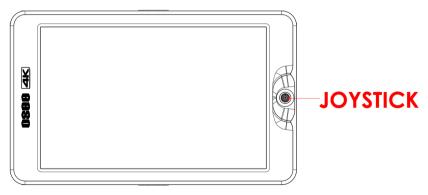


Figure 4.2-1 Buttons in Front Panel



4.3 Operations

Joystick

Use the joystick as a navigation tool to scroll between scenes pages and set features. The joystick provides multiple functions with five operation directions, **Up**, **Down**, **Left**, **Right** and **Straight Down**, as shown in Figure 4.3-1.

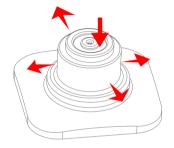


Figure 4.3-1 Five Operation Directions for Joystick

em: scroll it leftmost and hold on for 3 seconds to access the monitor settings menu

: scroll it right and hold on for 3 seconds to create a new scene

: access ZOOM mode; cancel scene deletion

: display backlight adjust menu; hold on for 3 seconds to delete current scene

🖜 : scroll it down to display the scene TOOL menu

Direction	Operation
UP	Without any menu, scroll up to access ZOOM mode. Keep



Direction	Operation		
	scrolling up, and switching among these three modes $FULL \rightarrow 2X \rightarrow 4X$; In ZOOM 2X or ZOOM 4X editing mode, scroll up the joystick to move the starting position of the enlarged image; In monitor settings, scroll up to select the previous item or increase the item value; In scene tool menu, scroll down to select the previous item or increase the item value. In a scene, scroll up to close the scene deletion prompt (No.1 scene can't be deleted) or close the Backlight menu.		
DOWN	In ZOOM mode, scroll down to exit ZOOM mode. In ZOOM 2X or ZOOM 4X editing mode, scroll up the joystick to move the starting position of the enlarged image; In monitor settings mode, scroll down to select the next item or decrease the item value; In scene tool menu, scroll down to select the next item or decrease the item value;; In scene page, scroll down to display the Backlight menu, and hold on for 3 seconds to prompt the scene deletion command.		
LEFT	Without any menu, scroll leftmost and hold on for 3 seconds to access the monitor settings menu; In ZOOM 2X or ZOOM 4X editing mode, scroll left the joystick to move left the starting position of the enlarged image; In monitor settings mode, scroll left to return to the previous level menu, or decrease the item value; In a tool bar of a scene, scroll left to return to the previous level menu or the downward adjustment the item value.		
RIGHT	Without any menu, scroll right to switch to a scene, or scroll right and hold on for 3 seconds to create a new scene; In ZOOM 2X or ZOOM 4X editing mode, scroll right the joystick to move right the starting position of the enlarged image; In monitor settings menu, scroll the joystick right to access the next level menu, or increase the item value; In a tool bar of a scene, scroll right to access the next level menu or the upward adjustment the item value.		



Direction	Operation
STRATIGHT DOWN	In ZOOM 2X or ZOOM 4X mode, press straight down the joystick to access editing the starting position of the enlarged image mode; In ZOOM 2X or ZOOM 4X editing mode, press straight down the joystick to confirm and finish the adjusting of the starting position of the enlarged image; In a scene, press straight down to display the Tool menu; In a tool bar of a scene, press straight down the joystick to enable or disable the selected tool; In monitor settings mode, press straight down the joystick to access the next level menu, or confirm the selection of the last level menu item and return to the previous level menu.

4.4 Power On

The power switch is on the right corner of the rear panel of T7 4K ULTRAHD. Use it to power the T7 4K ULTRAHD on or off.

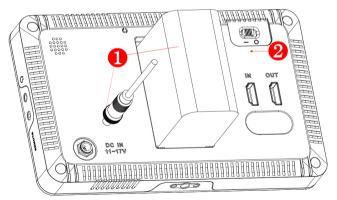


Figure 4.4-1 Power Switch

Power Method

There are two methods for powered T7 4K ULTRAHD as below:



Method 1: Powered by battery. There is a built-in battery slot at the rear panel of the monitor. It supports SONY NP-F series batteries. $(6V\sim8.4V)$

Method 2: Powered by DC power input. Use smart phone charger or power bank to connect external power through the DC IN interface. (11~17VDC)

Power On Operation

First, install the battery or connect the power cord.

Second, switch the power switch to "|" position, the device is powered on, and the control buttons on the front panel are lit up in highlight white.

Tips

- It will display the boot screen after power on for 3~4 seconds.
- Only use the adapter and the power cord specified by the manufacture for your safety!

4.5 **ZOOM**

You can get closer view to your image in ZOOM mode. It provides 2X ZOOM mode and 4X ZOOM mode, that is you can double(2X) or quadruple(4X) the image, and move the starting position of the enlarged image.

1. ZOOM 2X

■ Enter Zoom 2X Mode

Scroll right the joystick to access a scene, and then scroll up the joystick to access **Zoom 2X** mode, the image is twice as large as the original one. There will be a Zoom 2X icon at the bottom right of the



screen, as shown in Figure 4.5-1



Figure 4.5-1 Zoom 2X Mode

Zoom 2X Editing Mode

After accessing the Zoom 2X Mode, press straight down the joystick to move the starting position of the enlarged image.

There will be a Zoom 2X Editing icon at the bottom right of the screen, as shown in Figure 4.5-2. The small rectangle with four direction arrows in this icon represents the current full screen image in the monitor, you can judge where this area is in the original image.

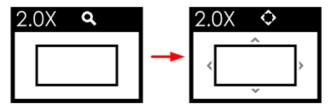


Figure 4.5-2 Zoom 2X Editing Mode

Moving the zoomed image

Meanwhile, scroll up, down, left or right the joystick to move the displayed area to the relevant direction, then, press straight down the joystick to confirm and finish the movement and exit the Zoom 2X Editing mode.

2. **ZOOM 4X**



■ Enter Zoom 4X Mode

Scroll up the joystick to show the **Zoom 2X** mode, and then keep scrolling the up the joystick to show the **Zoom 4X** mode, the image is four times as large as the original one. There will be a Zoom 4X icon at the bottom right of the screen, as shown in Figure 4.5-3:





Figure 4.5-3 Zoom 4X Mode

Zoom 4X Editing Mode

After accessing the Zoom 4X Mode, press straight down the joystick to move the starting position of the enlarged image.

There will be a Zoom 4X Editing icon at the bottom right of the screen, as shown in Figure 4.5-4. The small rectangle with four direction arrows in this icon represents the current full screen image in the monitor, you can judge where this area is in the original image



Figure 4.5-4 Zoom 4X Editing Mode

Moving the zoomed image

As the same as Zoom 2X editing mode, scroll up, down, left or right



the joystick to move the displayed area to the relevant direction, then, press straight down the joystick to confirm and finish the movement and exit the Zoom 4X Editing mode.

3. Original Image Mode

Original Image Mode

In Zoom 2X mode or Zoom 4X mode, press straight down the joystick, it will recover and display the original image.



The scene tools are not editable in ZOOM 2X or ZOOM 4X mode.

4.6 Supported Signal Format

The supported signal format for this device is as shown in Table 4.6-1:

Table 4.6-1 Supported Signal Format

Signal Format		HDMI
	4KP30/29.97	√
4KP	4KP25	√
	4KP24/23.98	√
	2160P30/29.97	√
2160P	2160P25	√
	2160P24/23.98	√
1080P	1080P60/59.94	√



Signal Format	HDMI	
	1080P50	√
	1080P30/29.97	√
	1080P25	√
	1080P24/23.98	√
10801	1080160/59.94	√
10001	1080I50	√
720P	720P60/59.94	√
720F	720P50	√
576P50	576P50	√
480P60 480P60		√



Chapter 5 Monitor Settings

The chapter describes the structure and functionality of the monitor settings, and introduces how to modify and customize the monitor settings.

Monitor settings contains the settings on input, volume, backlight, display rotate, anamorphic, DSLR scale, status display menu, LUTs, language, firmware and so on, as shown in Figure 5-1.

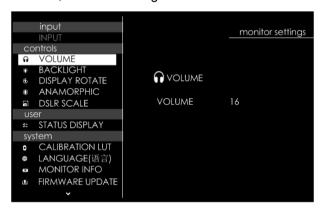


Figure 5-1 Monitor Settings Menu

The features on the screen are as shown in Figure 5-2:



Figure 5-2 Tools for T7 4K ULTRAHD Monitor



And there could be multiple accessorial objects on screen, such as status display information, aspect area, safe area, crosshair, waveform, audio meter, histogram, focus assist, false color and so on.

Please refer to the relevant sections for the details in this chapter.

5.1 Menu Operations

Display the Monitor Settings Menu

Scroll leftmost the **Joystick** to display the monitor settings Menu at the left side of the screen, as shown in Figure 5.1-1:



Figure 5.1-1 the Structure of the Monitoring Settings Menu

The menu interface is divided into two parts: **Level one menu** and **Level two menu**. Follow the instructions below:

Menu List for Monitor Settings

The level one menu is the main menu list for monitor settings, including input output, controls, user, and system.

Scroll up and down the **Joystick** to navigate to the level one menu of the monitor settings and select a menu item. The selected menu item will be highlighted in a control icon.

Submenu for Monitor Settings

The details of the selected menu item is located at the center right of the screen. You can check the content of the current menu item.

Scroll straight down the joystick, it will access the level two menu page, and the control icon followed. Then, scroll up or down to select the



submenu item, after that, scroll left or right to switch or adjust the value of the selected submenu item, at last, Scroll straight down to return to the previous level menu and confirm the setting.



 The control icon is displayed as a highlight white rectangle at the background of the current active item.

5.2 Monitor Menu

The following will introduce the contents and functionality of these menu items in sorts.

5.2.1 INPUT

The INPUT menu provides HDMI input, as shown in Table 5.2-1:

Table 5.2-1 Description of INPUT Menu

Menu	Items	Description
INPUT	HDMI	Select the input signal source



The INPUT menu can't be modified.

5.2.2 Controls

The **CONTROLS** menu items are used to adjust volume, backlight, rotating image, and set anamorphic ratio and image size from DSLR device. The menu items are as shown in Figure 5.2-1:



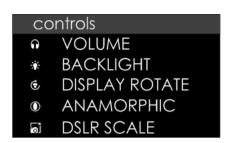


Figure 5.2-1 Controls Menu
Table 5.2-2 Description of Controls Menu Items

Menu	Items	Default	Domain Range	Description
VOLUME	VOLUME	16	0~31	Adjust the volume
BACKLIGHT	BACKLIG HT	8	0∼10	Adjust the backlight
DISPLAY	SCREEN ROTATE	AUTO	AUTO/0/ 180	Rotate the image and menus
ROTATE	IMAGE ROTATE	180	0/180	Rotate the image
ANAMORPHIC	OPTIONS	1X	1X/1.33X/ 1.5X/1.66 X/2X/ 2XMAG	Set the anamorphic ratio
DSLR SCALE	OPTIONS	NONE	NONE/ CANON 5D MARK II/CANON 7D	Enable the input signal from a variety of DSLR cameras to fill the screen of T7 4K ULTRAHD. This item is particularly to CANON/NIKON DSLR.

1. Adjust Volume



Select **control >VOLUME** item, scroll straight down to confirm the selection and display the VOULME menu, as shown in Figure 5.2-2. Scroll left to decrease the volume, or scroll right to increase the volume. Scroll it down to return to the previous level menu.



Figure 5.2-2 Volume Menu

2. Adjust Backlight

Select **control BACKLIGHT** item, scroll straight down to confirm the selection and display the BACKLIGHT menu, as shown in Figure 5.2-3. Scroll left to decrease, while scroll right to increase the backlight. Besides, scroll down the joystick to display the Backlight menu directly in a scene, then scroll up to exit this menu.



Figure 5.2-3 Backlight Menu

3. Display Rotate

Screen Rotate

Set control Display Rotate Screen Rotate item to be 180, 0 or AUTO, the input image will reverse vertically with the menus, as shown in Figure 5.2-4:







Original Image

Reverse Image

Figure 5.2-4 Vertical Rotate

■ Image Rotate

Set control→Display Rotate → Image Rotate item to be 180 or 0, the input image will reverse vertically.

4. Set Anamorphic Ratio

This feature enables you to de-squeeze signals coming from camera utilizing anamorphic lenses that may not have a built-in de-squeeze feature of their own. This is quite useful in applications, such as outdoor post production, onset monitoring, real-time de-squeezing, etc.

Select **control**→**ANAMORPHIC** item, scroll straight down to confirm the selection and display the **ANAMORPHIC**, as shown in Figure 5.2-5, scroll left or right to cycle through these anamorphic ratios: 1X, 1.33X, 1.5X, 1.66X, 2X, 2XMAG.



Figure 5.2-5 ANAMORPHIC Menu



The resolution of the input and output are as shown in Table 5.2-3:

Table 5.2-3 Resolution Relationship Between Input and Output

ANAMORPHIC	INPUT SIGNAL	INPUT	OUTPUT
1X	1080P/1080I	1920x1080	1920x1080
	720P	1280x720	1920x1080
1.33X	1080P/1080I	1920x1080	1920x812
	720P	1280x720	1920x812
1.5X	1080P/1080I	1920x1080	1920x720
	720P	1280x720	1920x720
1.66X	1080P/1080I	1920x1080	1920x650
	720P	1280x720	1920x650
2X	1080P/1080I	1920x1080	1920x540
	720P	1280x720	1920x540
2XMAG	1080P/1080I	1290x720	1920x803
	720P	860x720	1920x803

5. DSLR SCALE

This function is designed for some DSLR cameras (CANON 5D MARK II, CANON 7D). The valid area which will fill the screen is controlled by **control DSLR SCALE** item selection.

When the input source is coming from CANON 5D MARK II or CANON 7D DSLR device, but the **control→DSLR SCALE** item is set as **NONE**, the **DSLR SCALE** function is disable, there will be blank area at the surrounding of the image. Otherwise, set as the relevant DSLR model, it will enlarge and display the image at full screen, removing those useless blank bars, as shown in Figure 5.2-6:





DSLR SCALE=NONE

DSLR SCALE=CANNON 5D MARK II/ CANNON 7D

Figure 5.2-6 DSLR SCALE

For different **DSLR SCALE** item value, the resolution comparison of the input and output is as shown in the table below:

DSLR SCALE Item	INPUT RESOLUTION	OUTPUT RESOLUTION	
NONE	1920X1080	1920x1080	
CANNON 5D MARK II	(1920X1080)x0.85	1920x1080	
CANNON 7D	(1920X1080) x0.85	1920x1080	

5.2.3 User

The **User** menu items are used to set the status display bar, Fast mode, multiple images display mode and settings, backlight, auto standby mode, aperture, language mode, horizontal flip, and uniformity, the menu items are as shown in Figure 5.2-7:




Figure 5.2-7 User Settings Menu
Table 5.2-4 Description of User Menu Items



Menu	Items	Default	Domain Range	Description
STATUS DISPLAY	OPTIONS	()FF		Enable/disable the status bar at the top of the screen

1. STATUS BAR

Set user->STATUS DISPLAY item to be ON, it will display the Status bar at the top of the screen, including these information from left to right: Input source format and the battery voltage indication.

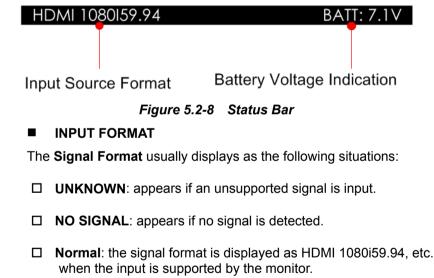

5.2.4 System

The **system** menu provides calibration, language selection, firmware update, LUT file loading and factory reset operations, as shown in Figure 5.2-9:



system • CALIB

- CALIBRATION LUT
- LANGUAGE(语言)
- MONITOR INFO
- FIRMWARE UPDATE
- ø LOAD LUT FILE
- FACTORY RESET

Figure 5.2-9 System Menu
Table 5.2-5 Description of System Menu Items

Menu	Items	Default	Domain Range	Description
	COLOR TEMP	NATIVE	NATIVE/ D56/D65 /D93/ USER	Select a calibration standard for the panel
	GAMMA	2.2	2.2/2.4	Set Gamma
	CALIBRATION LUT	ON	ON/OFF	Enable/disable calibration LUT
CALIBRATI	BRIGHTNESS	50	0~100	Adjust the brightness
ON LUT	SATURATION	50	0~100	Adjust the saturation
	R-GAIN	512	0~512	Adjust the Red Gain
	G-GAIN	512	0~512	Adjust the Green Gain
	B-GAIN	512	0~512	Adjust the Blue Gain
	RGB GAIN RESET			Reset R,G,B GAIN
	COLOR FROM	D65	D56/D65	Copy this parameter value to



Menu	Items	Default	Domain Range	Description
			/D93	USER
	INPUT LEVELS	VIDEO	VIDEO: 64~940 FULL: 0~1023	Set color range
LANGUAG E	OPTIONS	中文	ENGLIS H/ 中文/ Franais/ Espaol	Select a language mode
	VERSION			Show the firmware versions
MONITOR INFO	SERIAL NUMBER			Show serial number
	MODEL			Show device model
FIRMWAR E UPDATE	EXECUTE FIRMWARE UPDATE			Execute firmware update
LOAD LUT FILE	EXECUTE LOAD LUT FILE			Load a color look profile from SD card
FACTORY RESET	EXECUTE FACTORY RESET			Revert the factory settings
INLOCI	LOGO DISPLAY	ON	OFF/ON	Enable/disable LOGO display

1. Enable/Disable Calibration

Set **system**→ **CALIBRATION LUT** item to display the CALIBRATION menu, as shown in Figure 5.2-10:



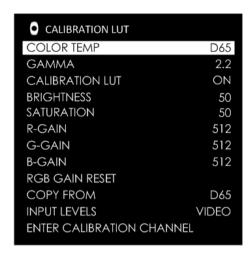


Figure 5.2-10 Calibration LUT Menu

Set system→ CALIBRATION LUT → CALIBRATION LUT item as ON, it will be able to load LUT file.

Set system→ CALIBRATION LUT → CALIBRATION LUT item as OFF, it will be disable to load LUT file.

2. Load LUT File

First, write the designated LUT file to the monitor.

Operation: Select system

LOAD LUT FILE

EXECUTE LOAD LUT FILE item to choose a LUT file from SD card.

Scroll the joystick right to display the LUT file list menu, as shown in Figure 5.2-11, scroll up or down to select a LUT type as **USER LUT**, **CAMERA LUT** or **CALIBRATION LUT**, and press the joystick straight down to confirm the selection. Then, it will pop up a series of directories for navigating to the designated LUT file, scroll up or down to select the LUT file with .cube suffix, and specify its storage directory, as shown in Figure 5.2-12, please don't cut off the power during loading.



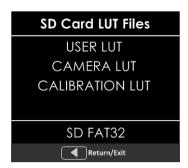


Figure 5.2-11 Calibration LUT Directory

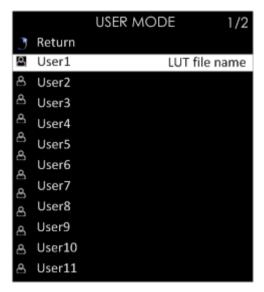


Figure 5.2-12 LUT Storage Directory

For example: Load a LUT file to **USER LUT**, it will prompt a directory for LUT file selection, then select a LUT and choose a target USER LUT to be stored, as shown in Figure 5.2-12. For example, select



USER1, press the joystick straight down to confirm the selection, it will write the specified LUT file into the monitor from the SD card.

Second, use **LOOK** tool to activate a LUT to current scene.

Operation: scroll the joystick right to access a scene, and add a **LOOK** tool for the scene, for example, set the **ENABLE** item as **ON**, **SETTING** item as **USER**, and **USER LUT** as **USER1**, thus, it will apply **USER1** to current scene display. After activating a LUT file, it will be loaded to the image display immediately, as shown in Figure 5.2-13:

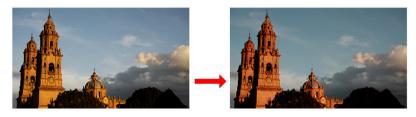


Figure 5.2-13 Output Image Applied with a LUT File



- Make sure to restart the device to effect the selected user LUT file after loading it to a designated LUT directory through the SD card.
- There will a "File format not support!" prompt for unavailable LUT file when executing file writing operation.
- The items about RED/GREEN/BLUE GAIN are available only in USER mode. If the COLOR TEMP sets as USER with customized settings, you can select the menu item RGB GAIN RESET command to restore product originals for Gains.
- Refer to "6.1.4 Look Tools" for the details about loading the 3D LUT file.
- Make sure your SD card is FAT32 format, otherwise, it will not be supported in this monitor.



If detecting no SD card during the operation, it will prompt "SD Card does not exist!"; if any other wrong happened, it will pop up the relevant prompt, please check it according to this prompt.

3. BRIGHTNESS

Set system
CALIBRATION
BRIGHTNESS item to adjust the brightness. Scroll left to decrease the brightness, or scroll right to increase the brightness.

4. R/G/B GAIN

Set system→ CALIBRATION →R-GAIN/G-GAIN/B-GAIN item to adjust the gain values. Scroll left to decrease the gain, or scroll right to increase the gain.

5. FIRMWARE UPDATE

Select system→ FIRMWARE UPDATE→EXECUTE FIRMWARE UPDATE item to upgrade the firmware, it will prompt as shown in Figure 5.2-14:



Figure 5.2-14 FIRMWARE UPDATE

Scroll right to select **OK** command, and press the joystick straight down to confirm the selection. It will update the firmware from the SD card.

6. FACTORY RESET

Select system→ FACTORY RESET→ EXECUTE FACTORY RESET



item to initialize the settings to default values, it will pop up a prompt, as shown in Figure 5.2-15, scroll right to select **RESET** command, and press the joystick straight down to confirm the selection.

Please pay some patience during the reset operation, and it lasts about one minute. The device will be in black screen mode for a short time after confirming reset operation, and then it will display the Boot Screen for successful reset operation, as shown in Figure 5.2-16. At last, please restart the device by manual.



Figure 5.2-15 Prompt for Factory Reset



Figure 5.2-16 Boot Screen



Tips

 It lasts about one minute for restarting operation, please don't do any operations during restarting the device.





Chapter 6 Scenes and Tools

6.1 Scenes Tools Settings

You can create customized scenes pages with different features and settings in T7 4K ULTRAHD. In a scene, press the joystick straight down, and select **ADD NEW TOOL** command, and press the joystick straight down again, it will display the Tools Menu, as shown in Figure 6.1-1.





Figure 6.1-1 Tools Menu for Scene

The tools menu provides access to tools aiding in composition, focus and exposure for a scene, you can add several tools on a scene, and then they will be listed in a tool bar, as shown in Figure 6.1-2. After adding tools



to the tool bar of a scene, you can edit the tool's attributes by its tool settings menu, as shown in Figure 6.1-3:



Figure 6.1-2 Tool Bar for A Scene



Figure 6.1-3 Tool Settings Menu

It will introduce the tools and their attributes in the following section, and refer to "6.2 Tools Operations" for the details about tools operation.



6.1.1 Frame Tools

Frame tools assist to set viewing frame, including aspect area, safe area, center and crosshatch. Show or hide these markers by their switches easily, and their display style and transparency are adjustable.



Figure 6.1-4 Frame Tools
Table 6.1-1 Description of Frame Tools

Tool	Items	Default	Domain Range	Description
	ENABLE	OFF	OFF/ON	Enable/Disable area marker display
	RATIO	4:3	4:3/1.85:1/ 2.39:1 /16:9/ CUSTOM	Select the marker type
ASPECT	WIDTH	DTH 75 25~100 Set the width of the CUSTOM mode	Set the width of the mat area in CUSTOM mode	
	HEIGHT	75	25~100	Set the height of the mat area in CUSTOM mode
	SETTING	MATTE	MATTE/ LINE	Set the mat area type is 50% darken area or line
SAFE	ENABLE	OFF	OFF/ON	Enable/Disable safe marker display



Tool	Items	Default	Domain Range	Description
	FORMAT	16:9	16:9/14:9/ 4:3	Set the safe marker position
	ACTION	OFF	OFF/ON	The safe marker is displayed as an outside frame, proportional to 92% of the FORMAT
	TITLE	OFF	OFF/ON	The safe marker is displayed as an inside frame, proportional to 80% of the FORMAT in horizontal direction, and 90% of the FORMAT in vertical direction.
CENTER	ENABLE	OFF	OFF/ON	Enable/Disable crosshair display
CROSSH	ENABLE	OFF	OFF/ON	Enable/Disable crosshatch display
ATCH	REGIONS	2	2∼9	Set the cross line number

1. Marker

Marker	Illustration	Description
ASPECT (AREA MARKER)	ASPECT	This marker identifies an area with a specified aspect ratio.
SAFETY MARKER	SAFE MARKER	This marker displays a rectangle to identify the safety area with a specified percentage in Area Marker.



Marker	Illustration	Description
CENTER MARKER	CROSSHAIR +	This marker enables easier checking the center portion's focus.
CROSS HATCH	CROSS HATCH	This marker displays multiple vertical and horizontal lines to help when users check the composition of a picture.

2. Area Marker

Set the area marker **FRAME** → **ASPECT SAFE** → **RATIO** item as **CUSTOM**, the **WIDTH** and the **HEIGHT** of the marker are adjustable as your requirement.

And the outside area of the area maker could be filled with FRAME→ASPECT SAFE →SETTING selection, you can choose it as MATTE or LINE.

- ☐ **LINE**: there are two white lines labeled the area marker;
- MATTE: the outside area of marker is 50% blackness of the background, and without lines, as shown in Figure 6.1-5:







STYLE=MATTE

Figure 6.1-5 Marker Mat Style



6.1.2 Expose Tools

Expose tools provide false color, zebra, histogram, waveform and vectorscope, as shown in Figure 6.1-6:



Figure 6.1-6 Expose Tools
Table 6.1-2 Description of Expose Tools

-	ГооІ	Items	Default	Domain Range	Description
		ENABLE	OFF	OFF/ON	Enable/Disable false color function
ш	FALSE COLOR	SETTING	Spectrum	Ref Table 6.1-3	Set the type of the false color display
- 4	ZEBRA	ENABLE	OFF	OFF/ON	Enable/Disable the zebra function that will compare the signal luminance with the ZEBRA LEVEL, and fill the relevant image area whose luminance is higher than the ZEBRA LEVEL with a zebra pattern.
		LEVEL	50	0~100	Set the reference level of detecting luminance.



Tool	Items	Default	Domain Range	Description
	ENABLE	OFF	OFF/ON	Enable/Disable histogram display
HISTOG RAM	SETTING	LUMA	LUMA: luminance histogram RGB: RGB histogram	Set the type of the histogram
RAIVI	LOCATION	TOP RIGHT	Ref Table 6.1-4	Set the position of the histogram
	OPACITY	0	0: 100% 1: 75% 2: 50% 3: 25%	Set the transparency of the histogram
	ENABLE	OFF	OFF/ON	Enable/Disable waveform display
	SETTING	LUMA	LUMA/RGB/ PARADE	Set the type of the waveform
WAVE FORM	SIZE	SMALL	SMALL/ MIDDLE/ LARGE	Set the size of the waveform
	LOCATION	TOP RIGHT	Ref Table 6.1-4	Set the position of the waveform
	OPACITY	0	0~3	Set the transparency of the waveform
VECTOR	ENABLE	OFF	OFF/ON	Enable/Disable vectorscope display
	LOCATION	TOP RIGHT	Ref Table 6.1-4	Set the position of the vectorscope
	OPACITY	0	0∼3	Set the transparency of the



Tool	Items	Default	Domain Range	Description
				vectorscope

1. FALSE COLOR

EXPOSURE ASSIST is also known as FALSE COLOR, this function generates an artificial luminance map of the input signal that can be useful to identify over exposed areas (exposure). This is a quick way to gauge the exposure levels of an image in a clear way.

Choose the **FLASE COLOR** tool to the current scene, and activate the FALSE COLOR tool. It provides various types of FALSE COLOR as below:

Table 6.1-3 FALSE COLOR TYPES

FALSE COLOR TYPES				
Spectrum	BMD			
SONY SLOG3	BMD 4K			
SONY SLOG2	ARRI REC709			
ARRI LOGC	SONY LC709A			
CANON CLOG2	SONY LC709			
CANON CLOG3	PANASONIC V709			
PANASONIC VLOG	RED RG3			
RED LOG FILM	RED RG4			
RED RL3G10				

For example: Set FALSE COLOR → ENABLE item as ON, set FALSE COLOR → SETTING item as ARRI LogC, as shown in Figure 6.1-7:







FALSE COLOR=OFF

FALSE COLOR=ON

Figure 6.1-7 Comparison Mode- Original Image and Normal Mode Image



 The LOOK tool is incompatible with the False Color tool. That is, enable the LOOK tool, the False Color tool will be disabled automatically, and enable the False Color tool, the LOOK tool will be disabled automatically.

2. ZEBRA

The **ZEBRA** function is used to display images on the screen with a zebra pattern to adjust the camera exposure parameter. It will compare the signal luminance with the **ZEBRA LEVEL**, and fill the relevant image area whose luminance is higher than the **ZEBRA LEVEL** with a zebra pattern

For example, set the **ZEBRA LEVEL** as 80, the compared results are as shown in Figure 6.1-8, the special area is filled with a zebra pattern.







ORIGINAL IMAGE

ZEBRA CHCEK


Figure 6.1-8 Illustration for ZEBRA Function


3. HISTOGRAM

Histogram assists in judging the distribution of luminance in the image.

■ Histogram Type

Set **EXPOSE HISTOGRAM SETTING** item as LUMA or RGB, these two histogram types are as shown in Figure 6.1-9:

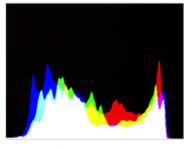

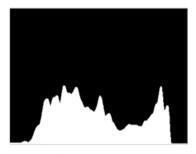

STYLE=RGB

STYLE=LUMA

Figure 6.1-9 RGB Histogram and LUMA Histogram

4. WAVEFORM

■ WAVEFORM SIZE



Set **EXPOSE WAVEFORM SIZE** item to adjust the size of the waveform, there are three kinds of sizes for waveform:

- ☐ Small size waveform: set SIZE item as SMALL, and this kind of waveform could be located in any one of the 8 positions listed in LOCATION item;
- □ 75% waveform: set SIZE item as MIDDLE, and this kind of waveform is located in the center bottom of the screen, and it can't be moved;
- ☐ Full size waveform: set **SIZE** item as **LARGE**, and this kind of waveform is located in the bottom of the screen, and it can't be moved.

■ WAVEFORM TYPE

Set **EXPOSE > WAVEFORM > STYLE** item to display the following three kinds of waveform as LUMA, RGB, PARADE, as shown in Figure 6.1-10:

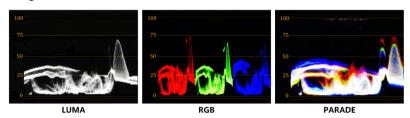


Figure 6.1-10 LUMA Waveform and RGB Waveform and PARADE
Waveform

5. VECTORSCOPE

Set **EXPOSE > VECTOR > ENABLE** item to display or hide the vectorscope.



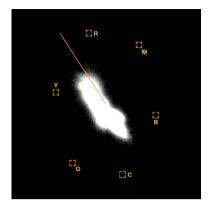


Figure 6.1-11 VECTORSCOPE

6. LOCATION

There are 8 positions for display the histogram, waveform and vectorscope on the screen, as shown in Table 6.1-4 and Figure 6.1-12. Move them through the **LOCATION** item.

Table 6.1-4 LOCATION SETTINGS

Locations				
TOP RIGHT	BOTTOM LEFT			
MIDDLE RIGHT	MIDDLE LEFT			
BOTTOM RIGHT	TOP LEFT			
MIDDLE BOTTOM	TOP MIDDLE			



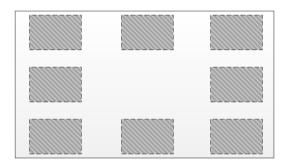


Figure 6.1-12 Location of the Assistant Elements

7. OPACITY

There are 4 degrees of opacity for display the histogram, waveform and vectorscope on the screen. Set the transparency through the **OPACITY** item.

- □ 0: 100%, when opacity set to 0, the assistant element (histogram, waveform or vectorscope) is opaque, not transparent.
- □ 1: 75%, when opacity set to 1, the assistant element (histogram, waveform or vectorscope) is proportional to 75% opacity.
- □ 2: 50%, when opacity set to 2, the assistant element (histogram, waveform or vectorscope) is proportional to 50% opacity.
- □ 3: 25%, when opacity set to 3, the assistant element (histogram, waveform or vectorscope) is proportional to 25% opacity.

For example: set EXPOSE→HISTOGRAM→ OPACITY as 0, 1, 2, 3 separately, the comparison are as below:



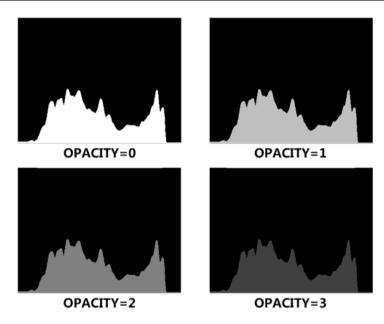


Figure 6.1-13 Different Opacity for Histogram

6.1.3 Focus Tools

Focus tools provide the focus assist function and the peaking function. Set display color, sensitivity and display type for focus assist, and set intensity for peaking detecting.



Figure 6.1-14 Focus Tools
Table 6.1-5 Description of Focus Tools



Tool	Items	Default	Domain Range	Description
	ENABLE	OFF	OFF/ON	Enable/Disable focus assist function
	COLOR	RED	STANDARD /RED /GREEN /BLUE	Select the color of the focus assist edge. For standard color, the intensified edges highlight in white.
FOCUS ASSIST	SENSITIVITY	5	1 ~ 10	Set the edge difference value between the edges in an image, and take this value as the reference value. Larger value means more detail detection.
	B&W BACKGRO UND	OFF	OFF: COLOR MODE ON: BLACK &WHITE MODE	Set the Focus Assist display mode: color mode or black&white mode.
	ENABLE	OFF	OFF/ON	Enable/Disable peaking function Over sharpen the image.
PEAKING	INTENSITY	5	1~10	Set the sharpness level of the image. The higher the value, the sharpener the image.

1. FOCUS ASSIST

The FOCUS ASSIST function is used to display images on the screen with intensified edge to help camera focus operation. The intensified edges are those areas whose difference value exceeds the reference focus level (**SENSITIVITY**), and the intensified edge are displayed in the designated color set by **COLOR**.

■ FOCUS ASSIST MODE



- □ COLOR MODE: Set FOCUS →FOCUS ASSIST →B&W BACKGROUND item as OFF, the image is in color mode, then set FOCUS →FOCUS ASSIST →COLOR to color the intensified edge.
- B\$W MODE: Set FOCUS →FOCUS ASSIST →B&W BACKGROUND item as ON, the image is in black and white mode, that is removing all colors and only leaving the luminance data of the signal.



B&W BACKGROUND=OFF COLOR=RED



B&W BACKGROUND=OFF COLOR=GREEN

Figure 6.1-15 Illustration for FOCUS ASSIST Function



B&W BACKGROUND=ON

Figure 6.1-16 Illustration for FOCUS ASSIST Function



6.1.4 Look Tools

Look tools provides loading 3D LUT profile and adding audio meter to current scene, as shown in Figure 6.1-17



Figure 6.1-17 Look Tools
Table 6.1-6 Description of Look Tools

Tool	Items	Default	Domain Range	Description
	ENABLE	OFF	OFF/ON	Enable/Disable LUT profile function
	SETTING	CAMERA	CAMERA/ USER	Select the LUT type
LOOK	CAMERA LUT	ARRI_LogC _Rec709	Ref Table 6.1-7	Select a camera LUT
	USER LUT	User1	User1 \sim User16	Select a user LUT
	USER LUT NAME			Display the user LUT name
	ENABLE	OFF	OFF/ON	Enable/Disable audio meter display
AUDIO METER	LOCATION	BOT LEFT	BOT LEFT/ BOT RIGHT	Set the position of the audio meter
	OPACITY	0	0~3	Set the transparency of the audio meter



1. LOOK PROFILE (3D LUT)

The monitor is equipped with versatile color lookup profiles for different requirements. We provide the following LUT profiles:

- ☐ CAMERA LUT: preset camera logs, as shown in Table 6.1-7;
- ☐ **USER LUT**: custom 3D LUTs from SD card.

Select **LOOK > LOOK > CAMERA LUT** item to choose a 3D LUT file from SD card or internal files.

■ Preset LUT File(CAMERA LUT)

There are versatile preset 3D-LUT tables, supporting the LUT files for ARRI, RED, SONY, Panasonic, Canon, BlackMagic and Panavision, etc.

Table 6.1-7 CAMERA LUT Files

Preset LUT File	Company
ARRI_LogC_Rec709	ARRI
BMD_4.6KFilm_Rec709	
BMD_4.6KFilmV3_Rec709	
BMD_4KFilm_Rec709	
BMD_4KFilmV2_Rec709	BlackMagic
BMD_4KFilmV3_Rec709	
BMD_CCFilm_Rec709	
BMD_CCFilmV2_Rec709	
Canon_CLog1Cine_Rec709_FF_V1.1	
Canon_CLog2Cine_Rec709_FF_V1.1	Canon
Canon_CLog3Cine_Rec709_FF_V1.1	



Preset LUT File	Company			
DJI_Phantom3DLog_Rec709_Improv				
DJI_Phantom4DLog_Rec709	D. II			
DJI_Phantom4Dlog_Rec709_Improv	DJI			
II_X5DLog_Rec709_Improv				
FUJI_FLogFGamut_FLogRec709_V1				
FUJI_FLogFGamut_WDRRec709_V1	FUJIFILM			
GoPro_Protune_Rec709	GoPro			
JVC_JLog1_Rec709_Daylight	IV/C			
JVC_JLog1_Rec709_Tungsten	JVC			
Panasonic_VLog_V709_V1	Panasonic			
RED_L3G10RWG_Rec709_ R1_V1.13				
RED_L3G10RWG_Rec709_ R2_V1.13				
RED_L3G10RWG_Rec709_ R3_V1.13	RED			
RED_L3G10RWG_Rec709_ R4_V1.13				
RED_RedLogFilm_RG3				
Sony_SLog2SGamut_LC709				
Sony_SLog2SGamut_LC709A	Sony			
Sony_SLog3SG3Cine_LC709				
Sony_SLog3SG3Cine_LC709A				

Tips

- The preset LUT files are constantly under development.
- T7 4K ULTRAHD supports color management software CalMAN



currently, the customized 3D LUT profiles(*.cube) produced by these software could be loaded to SD card by a control computer.

The LOOK tool is incompatible with the False Color(EXPOSURE
 ASSIST) tool. That is, enable the LOOK tool, the False Color tool will
 be disabled automatically, and enable the False Color tool, the LOOK
 tool will be disabled automatically.

2. AUDIO METER

Set **LOOK AUDIO METER ENABLE** item as ON to enable the display of Audio Meter on screen.

The audio meter could be displayed at the left bottom or right bottom of the screen, and the opacity could be set from 0 to 3. Refer to "6.1.2 Expose Tools--7 OPACITY" for the details about OPACITY.

The volume in normal range appears in green, above -20dB but below -10dB appears in yellow, and above -10dB appears in red, as shown in Figure 6.1-18:



Figure 6.1-18 Audio Meter

6.1.5 Scale Tools

Scale tool is used to adjust the horizontal and vertical size of the screen, as shown in Figure 6.1-19



Figure 6.1-19 Scale Tools



Tool	Items	Default	Domain Range	Description
IMAGE RE-SIZE	ENABLE	OFF	OFF/ON	Enable/Disable image scale function
	LOACTION	TOP LIGHT	TOP RIGHT MID RIGHT BOT RIGHT MID BOT BOT LEFT MID LEFT TOP LEFT TOP MID CENTER	Set image position on screen

Table 6.1-8 Description of Scale Tools

1. IMAGE SCALE

Activate Image Scale Function

Set **SCALE > SCALE > ENABLE** item as **ON**, the image scale is activated. The image size changes to 75% of the original one, and after scaling down, the blank area will be filled with black, as shown in Figure 6.1-20:







Size=75

Figure 6.1-20 Scale Illustration

■ Image Position

There are 9 positions for display the small image on screen, they are



TOP RIGHT, MIDDLE RIGHT, BOTTOM RIGHT, MIDDLE BOTTOM, BOTTOM LEFT, MIDDLE LEFT, TOP LEFT, TOP MIDDLE and CENTER, as shown in Figure 6.1-21. Move it through the **LOCATION** item.

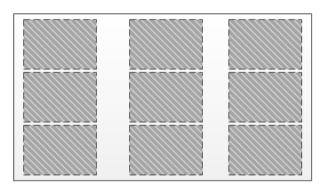


Figure 6.1-21 Image Position

6.2 Tools Operations

It will introduce how to edit scene and its tools in this section.

6.2.1 Add a Scene

You can customize up to 8 scenes in T7 4K ULTRAHD for various requirement, and switch swiftly among these scenes by joystick operations.

Scroll the joystick right and hold for 3 seconds to add a new scene, it will prompt "Add New MySet command in the bottom center of the screen, as shown in Figure 6.2-1, press the joystick straight down to confirm the operation.

The scene will be numbered in sequence, and the name (a scene icon followed by a number) will be displayed at the bottom center of the screen,



as shown in Figure 6.2-2:



Figure 6.2-1 Add New MySet



Figure 6.2-2 A New Scene



- T7 4K ULTRAHD supports up to 8 customized scenes.
- No.1 scene exists by default.



Scroll the joystick left or right to switch among scenes.

6.2.2 Delete a Scene

Scroll the joystick down in a scene, it will display the **DELETE** command at the bottom of the screen, as shown in Figure 6.2-3. Press the joystick straight down to confirm deletion, and there will be a waiting prompt during the deletion. Wait until the prompt disappeared, then the scene deletion is completed.



Figure 6.2-3 Prompt for Delete a Scene



No.1 scene can't be deleted.

6.2.3 Add a Tool

After creating a scene, add some tools to assist in composition, for example, add a marker, waveform, histogram or audio meter, etc.



- Each scene supports up to 8 scene tools.
- You can add more than one of the same tool in a scene.

Scroll the joystick down, it will pop up the "**ADD NEW TOOL**" command, as shown in Figure 6.2-4. Press the joystick straight down to confirm, and it will pop up the **Tools Menu** on screen, as shown in Figure 6.2-5:





Figure 6.2-4 Add a New Tool



Figure 6.2-5 Tools Menu for Scene

Scroll the joystick up or down to select your desired scene tool, and press the joystick straight down to confirm, the selected tool will be added to the **Tool Bar** of the current scene.

For example: Add histogram to Tool Bar

Scroll the joystick up or down to **HISTORGRAM** item, as shown in Figure 6.2-6, press the joystick straight down to confirm the selection, the **HISTORGRAM**, tool will be added in the tool bar, as shown in Figure



6.2-7:



Figure 6.2-6 Choose Histogram Tool



Figure 6.2-7 Histogram in the Tool Bar

Continue to add other tools for the scene, and you can add up to 8 tools in a scene.



6.2.4 Load/Close Tool Bar

In a scene, after added the tools, you can load the tool bar or close the tool bar. The instructions are as below:

■ Load Tool Bar

First, scroll the joystick right to access a scene;

Second, press the joystick straight down to load the tool bar for the current scene, the tool bar will be displayed the leftmost of the screen, as shown in Figure 6.2-8. The bar labeled in the red rectangle are the tool bar for the current scene.

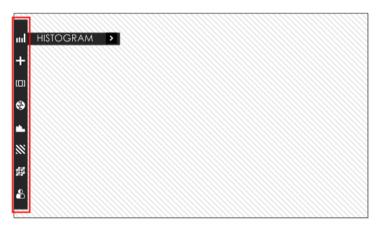


Figure 6.2-8 Tool Bar for A Scene

■ Close Tool Bar

☐ After loading a tool bar, scroll the joystick left to close the tool bar.



☐ When in editing tool setting menu status, scroll the joystick left to return to the previous menu, then scroll the joystick left to close the tool bar.

Open tool setting menu

After loading a tool bar, scroll the joystick right to access tool settings menu, as shown in Figure 6.2-9

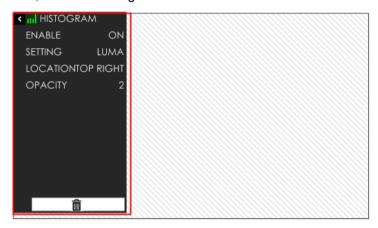


Figure 6.2-9 Tool Setting Menu

Scroll the joystick left to return to the tool bar and close the tool setting menu.

6.2.5 Open/Close a Tool

Follow the instructions below to open or close a tool swiftly:

Open a Tool

First, press the joystick straight down to load the tool bar of the current scene:

Second, scroll the joystick up or down to select a tool;



At last, press the joystick straight down to open the tool.

■ Close a Tool

Press the joystick straight down to close the tool after opened it.

Select a Tool

Scroll the joystick up or down to select a tool after loading the tool bar.



• The tool icon in the tool bar will change in highlight green of opened status, and will change in white of closed status.

6.2.6 Tool Settings

Add tools for a scene through the tool settings, then, set a tool's attributes by scrolling the joystick right, it will display the tool settings menu on the screen.

Scroll the joystick left or right to switch among different scenes. The tool bar is hidden when switching to a scene by default. You should press the joystick straight down to display the tool bar for the current scene.

Operate the tool bar to display each tool settings menu, and set the style, location or size of the tool. Refer to "6.1 Scenes Tools Settings" for the details of each tool.

For example: Display histogram on a scene.

In a scene, press the joystick straight down to display the tool bar at the left side of the screen. Scroll the joystick down to move the cursor onto the **HISTOGRAM** tool icon, as shown in Figure 6.2-10:





Figure 6.2-10 Select HISTOGRAM

Press the joystick straight down to load the histogram window on the screen, and the histogram icon is lit in highlight green, as shown in Figure 6.2-11. Or press the joystick straight down again to close the histogram window.



Figure 6.2-11 Display the Histogram

Scroll the joystick right to access the next level menu, it will display the



histogram settings menu, as shown in Figure 6.2-12. It lists the characteristics of histogram in this menu, such as SETTING, LOCATION, OPACITY and ENABLE switch. After finish the parameter settings, scroll the joystick left to return to the tool bar.



Figure 6.2-12 Settings Menu for Histogram

Tips

 The parameters of the tool could not be modified until the tool is opened.

6.2.7 Delete a Tool

In a scene, press the joystick straight down to display the tool bar for current scene, and scroll the joystick up or down to select the tool which you want to delete, then scroll right to access the tool setting menu, and select **DELETE** command at the end of the menu list, as shown in Figure 6.2-13.





Figure 6.2-13 Delete a Tool

Press the joystick straight down to confirm the selection, and it will pop up a prompt to confirm the deletion, as shown in Figure 6.2-14, press straight down to delete, then the tool will be deleted from its tool bar.



Figure 6.2-14 Prompt for Deleting a Tool



Tips

• The effect or window displayed on the current scene will be closed after the relevant tool is deleted.





Chapter 7 Specifications

7.1 Product detailed information

Specification	Values					
Model	T7 4K ULTRAHD					
Display						
Dimension	7.0"					
Aspect Ratio	16:10					
Viewing Angle	160° (H)*160° (V)					
Resolution	1920×1200					
Contrast	1200:1					
Input Signal Formats						
HDMI	2160P30/29.97/25/24/23.98					
	1080P60/59.94/50/30/29.97/25/24/23.98					
	1080i60/59.94/50					
	720p60/59.94/50					
	480P60, 576P50					
Connector Type						
HDMI IN	HDMI Type A					
HDMI OUT	HDMI Type A, loop out					
Audio	3.5mm Mini Jack					
Control	2.5mm Jack					



Specification	Values					
Power						
Input Voltage	DC IN 11~17VDC					
Battery Types	SONY NP-F, 6V ~ 8.4V					
Consumption	16.2W					
Environmental						
Operating Temperature 0° C~50° C						
Dimensions(Bare Monitor) 192.0(m		nm) ×116.3(mm) ×24.7(mm)				
Weight(without Batter	Battery) 438g					
Features						
Image Scale		Yes	Zebra	Yes		
Anamorphic De-squeeze		Yes	Waveform	Yes		
Image Rotate		Yes	Vectorscope	Yes		
Cross Hatch		Yes	RGB Parade	Yes		
Center Marker		Yes	Histogram	Yes		
Safe Marker		Yes	Audio Meters	Yes		
Area Marker		Yes	Pre-loaded LUTs for Cameras	Yes		
Focus Assist		Yes	LUT Loaded via SD Card	Yes		
Peaking		Yes	Firmware Upgrading	Yes		
Pixel Zoom(2X & 4X)		Yes	Language(EN/CH)	Yes		
False Color		Yes		Yes		

7.2 Dimensions

The description of the T7 4K ULTRAHD dimensions are as shown in the following figures(Unit: mm):

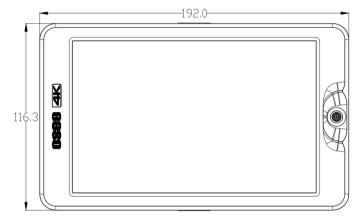


Figure 7.2-1 Front View(Unit: mm)

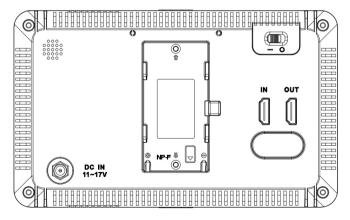


Figure 7.2-2 Back View(Unit: mm)



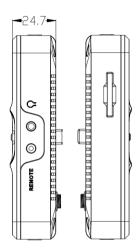


Figure 7.2-3 Side View(Unit: mm)

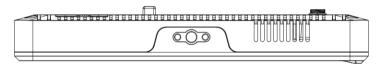


Figure 7.2-4 Top View (Unit: mm)



• Specifications are subject to change without notice.

-----No Text Below-----



FOR MORE INFORMATION PLEASE VISIT: http://www.osee-dig.com/

OSEE TECHNOLOGY LTD.

Address: No.22 Building, No.68 zone, Beiqing Road, Haidian District,

Beijing, China

Tel: (+86) 010-62434168 **Fax**: (+86) 010-62434169